



INS MANUAL

OPERATING INSTRUCTIONS

Model

BJT-75 **DINO**

Description

12 Volt Mobile Jump Starter.



Durst Motor & Electric Industries Pty Ltd

189 St Johns Road
Glebe NSW 2037

Website: www.durst.com.au
Phone: 02 9660 1755
Fax: 02 9692 0251

REV: NIL

Kevin Pitt

INS: 08

DATE: 24/02/14

AUTHORISED BY

PAGE 1 OF 2



When to Charge

Your Jump Starter is shipped fully charged, however, an extended period of time may elapse in shipment or storage before the Jump Starter is purchased. Therefore you should charge the Jump Starter for 12 hours before using it for the first time. It is recommended to charge after each use. If the Jump Starter is not being used, it is recommended to leave it permanently on charge ensuring the battery is always maintained fully charged and ready for use. This will also maintain battery life. Do not allow Jump Starter to become very flat.

When Charging

- Battery Switch to OFF position
- Plug Charger into charging socket on Jump Starter.
- Turn Battery Charger on and leave till next required

Vehicle Jump Starting Instructions

Note: Instructions for negatively earthed vehicles only

- Before making any connections, check the Jump Starter is in the OFF position and battery cables and clamps are in good condition.
- Ensure correct Jump Starter is used for the type of vehicle being Jump Started, 24V mode for 24V vehicles
- Turn your vehicles ignition OFF before connecting the Jump Starter's clamps to your vehicle
- Follow connection procedure below carefully
- Connect the Red **POSITIVE (+)** clamp to the positive (+) terminal of the battery in the vehicle and the Black **NEGATIVE (-)** clamp to any non-moving metal part of the engine block or chassis as far away from the battery as possible. **DO NOT CONNECT TO FUEL LINE.** Always double check that you have the proper connections

Note: If the buzzer sounds when the clamps are connected, STOP IMMEDIATELY and disconnect as there is a reverse connection somewhere. Recheck wiring connection and proceed.

- Turn the vehicle's ignition to ON and start the vehicle. If the Jump Starter fails to start your vehicle check that the clamps are correctly connected with good contact. Also check if there is another reason why your vehicle won't start. Is there fuel in the Vehicle?
- After the engine has started, turn the power switch on Jump Starter to the OFF position.
- Disconnect the Black Clamp then the Red Clamp
- Plug the Jump Starter back into Durst Smart Charger **BCS-A1206**

Accessories

- Fuse replacement Part Number for this unit is: **BJF-500**